
Changing your factory stops to lucky stops gives you the ability to fine tune your bow to fit you. The various sizes allow you to find a draw length in between factory settings, adjust the length of the valley, increase or decrease let-off, and firm the back wall feeling. All this equals Accuracy.

There are 4 different sizes of stops A4-D4 A4 being the smallest and incrementally progressing to D4. Each stop has 4 functional sides with 4 different radiuses depicted by the dots on the face 1 dot being smallest radius 4 dots being the largest radius. The different radii allows you to stop your cam in positions other than the factory setting. See Lucky-Stops.com for tuning tips with Lucky Stops.

Installation is easy:

- Note current position of stops and remove stops
- •For factory replacement use stop A4 and place 1dot side tangent to straight edge laid over module and stop (see below) this is done with the bow at rest
- Secure using supplied screws and medium strength thread locker
- Recheck periodically for tightness
- For more advance technics please visit website www.lucky-Stops.com

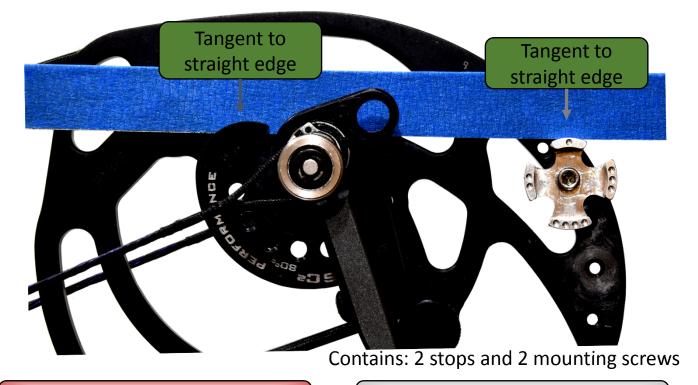

Made in USA

Patent Pending

www.Lucky-Stops.com