


Changing your factory stops to lucky stops gives you the ability to fine tune your bow to fit you. The various sizes allow you to find a draw length in between factory settings, adjust the length of the valley, increase or decrease let-off, and define the back wall feeling. All of this equals Accuracy.

The AV and BV stops have 4 functional sides, each size is depicted by the dots on the face, 1 dot being smallest 4 dots being the largest. The different sizes allows you to stop your cam in positions other than the factory setting. See Lucky-Stops.com for tuning tips with Lucky Stops.

Installation is easy:

- Use a card to make a template of your limb with a V cut to allow it to rotate around the axle as shown
- Note current position of the stops, and mark template, and remove stops
- Apply felt pads to limbs, use the mark on the template to locate the center of the felt pad and align with the inner edge of limb
- For factory replacement use stops AV and place 4 dot side
- Secure using supplied screws, hold stop in correct position with a 9/64 hex key inserted in counterbore, 4 dot side should be tangent to the limb template, this is done with the bow at rest
- Recheck periodically for tightness
- For video instructions see www.lucky-stops.com/how-to-install/

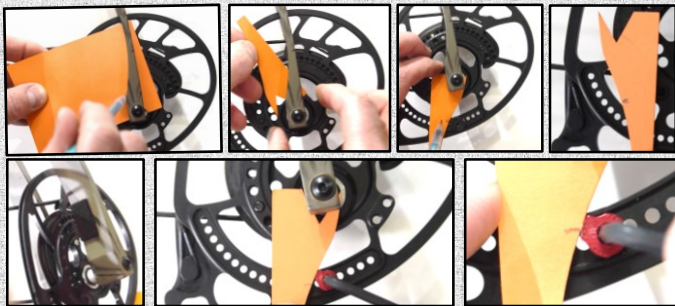

Contains: 2 stops, 2 felt pads and 2 mounting screws

Made in USA

Patent Pending

www.Lucky-Stops.com